

安装示意图/Assembly Instruction

产品名称 Model NO.	BY010-A/C Computer Chair
产品规格 Specification	710*705*1160/1250
安装工具 Tool	安装人数Installer



五金表/Hardware list

 (A)*1 6mm内六角扳手 Wrench-(6mm) Hexagon bar wrench	 (B)*1 十字螺丝刀 Phillips screwdriver	 (C)*2 扶手软扣盖 plastic cover	 (D)*2 平头内六角螺丝8*40 Flat Head Hexagon screw- (8*40) black
 (E)*7 平头内六角螺丝8*28 Flat Head Hexagon screw- (8*28) black	 (F)*2 平头内六角螺丝8*20 Flat Head Hexagon screw- (8*20) black	 (G)*4 圆头内六角螺丝6*20 Round head hexagon screw-(6*20) black	 (H)*2 沉头十字螺丝4*14 Countersunk head Phillips screw-(4*14) black
 (I)*1 钢板塑料盖 Steel plate plastic cover	 (J)*5 50PU椅轮 PU Wheels-50mm	 (K)*1 三级气压棒 3 class gas lift	 (L)*1 防尘套 Dustproof cover
 (M)*1 钢板 steel plate	 (N)*2 塑料扶手扣盖 plastic shim	 (O)*2 扶手定制扣盖 plastic cover	

扫一扫获取安装视频教程
Scan for installation video



Step 1: Scan the code to automatically jump to the page of the Official Accounts.


Step 2: Pull down the page to the installation video location.

部件表/Parts List

编号NO.	名称Name	规格Specification	数量QTY	材质Material
①	靠背 Backrest	875*495*150	1	PP+FG
②	座垫 Seat	525*530*100	1	Polyester+ Original Foam-24
③	330#椅脚 Chair Base-330mm	330mm	1	PP+FG
④	双手柄可躺拖 Recliner Mechanism	270*335*105	1	Steel
⑤	扶手-左 Armrest -Left		1	PP+FG
⑥	扶手-右 Armrest -Right		1	PP+FG



BY010-A/C Computer Chair

安装方法/Installation method

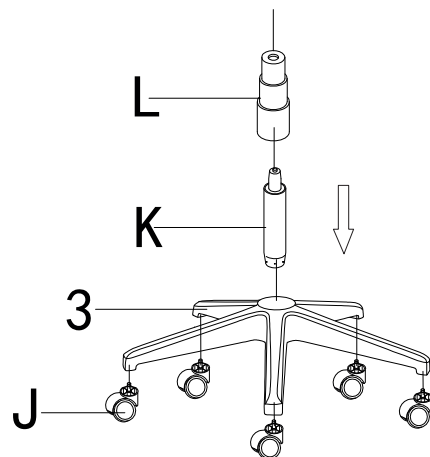

把椅轮J分别装入椅脚3的五个脚孔，再将气压棒K装入脚椅3的中心孔，最后套上防尘套L
Install the gaming wheels J into the five holes of the chair base 3, then install the gas lift K into the center hole of the chair base 3, and finally put on the dustproof cover L



1

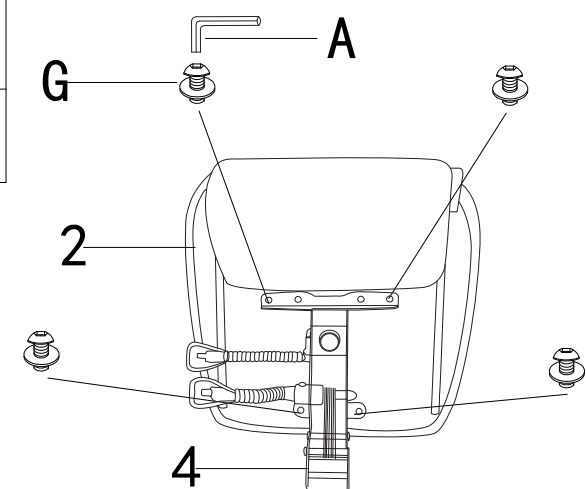

2


将底盘4放置于座垫2的中心位，使用五金G对准座垫2的孔位锁紧固定
Put the Recliner Mechanism 4 in the center of the seat cushion 2, and use hardware G to align with the hole of the seat cushion 2 to lock and fix it

3

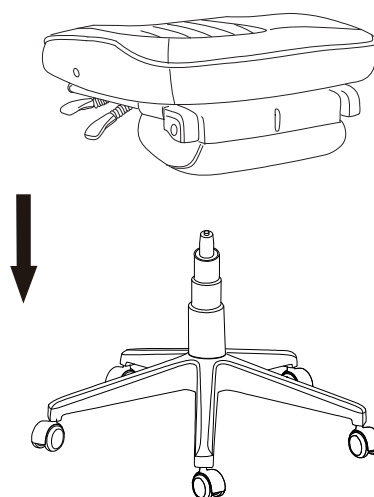

将气杆的顶端对准底盘的孔位对接，椅子下半部分安装完成
Align the top part of gas lift k with the hole of recliner mechanism 4 and palce the seat cushion to finish the installation of the lower half of the chair

4

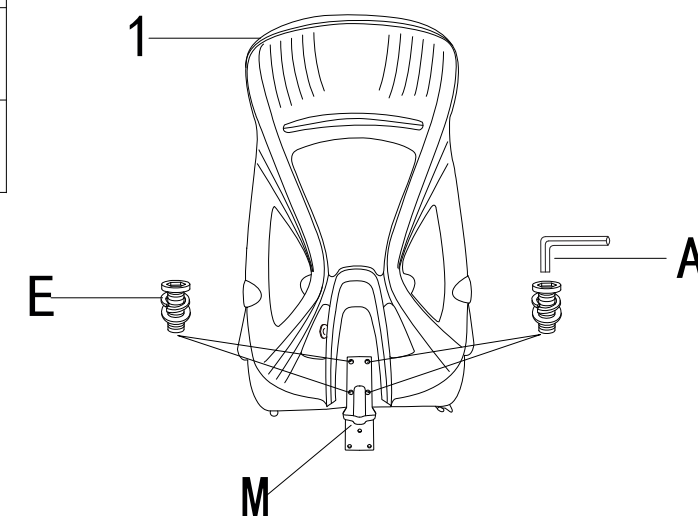

将钢板M对准靠背1相应孔位放置好，再使用五金E固定
Align the steel plate M with the corresponding hole of backrest 1 and place it then fix it with hardware E

BY010-A/C Computer Chair


安装方法/Installation method



(E)*3



(A)*1

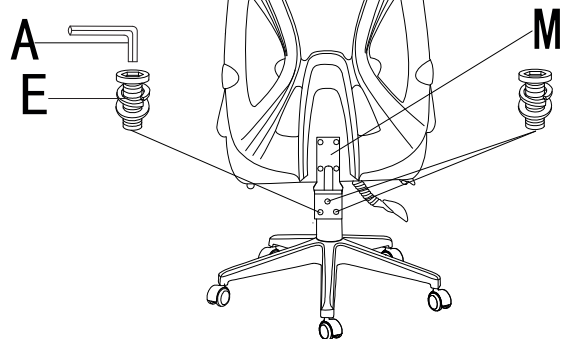

将钢板M对准底盘孔位插入，再使用五金E固定
Insert the steel plate M into the hole of the Recliner Mechanism4, and then fix it with hardware E



(D)*2




(F)*2



(N)*2



(A)*1

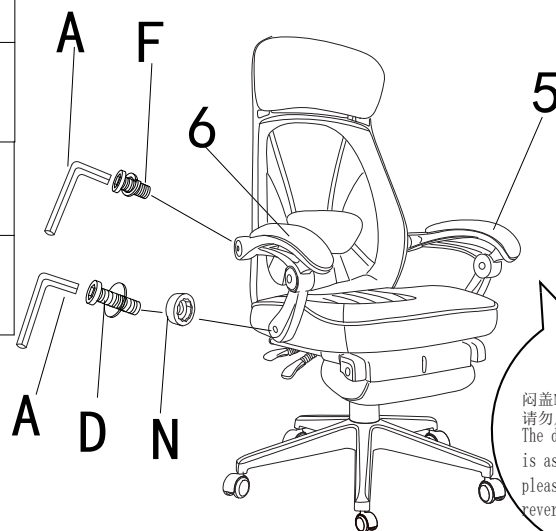

将扶手5,6放置在对位位置，使用五金F锁紧固定扶手上孔位，再使用五金N,D锁紧固定扶手下孔位
Place the armrests 5 and 6 at the corresponding positions, lock and fix the armrests and backrest with hardware F, and then use hardware N, D to lock and fix the armrests and seat cushion

闷盖N 方向如图所示
请勿反向组装！
The direction of the cover N is as shown in the figure, please do not assemble it in reverse!

5




(I)*1



(H)*2



(B)*1

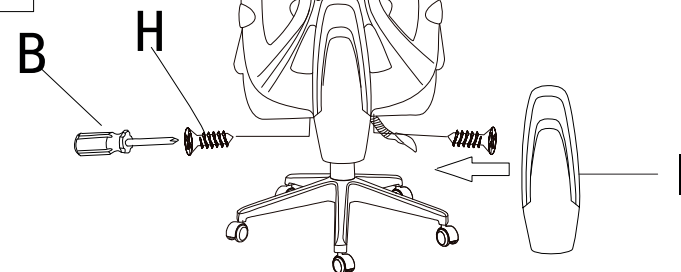

将钢板盖I打在钢板M上，在使用五金H固定
Put the steel plate cover I on the steel plate M, and fix it with the hardware H.

6


7



(C)*2



(O)*2

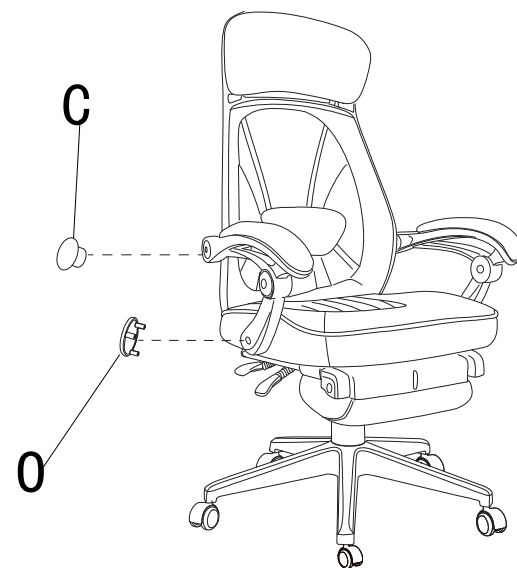

使用C,O打盖堵住扶手孔，安装完成
Block the armrests hole with C and O Plastic covers, and the installation is completed.

8